

USER'S MANUAL

**COMBINATION OVEN
WITH DIRECT STEAM AND
WITH STEAM GENERATOR**

SMART

**VERSION S
VERSION S COMPACT**

EN

Technical service



CONTENTS

	PAGE
1 • GENERAL REMINDERS	4
2 • POINTS TO REMEMBER	5
3 • DESCRIPTION OF KEYS	6
4 • MANUAL SETTINGS FOR ONE-PHASE COOKING	8
5 • SETTING THE OVEN MANUALLY FOR COOKING WITH TWO OR MORE CYCLES IN SEQUENCE	10
6 • ENTERING AND SAVING A PROGRAM	12
7 • SELECTING AND STARTING A SAVED PROGRAM	13
8 • DELETING A SAVED PROGRAM	14
9 • TEMPORARILY ALTERING A SAVED PROGRAM	14
10 • SELECTING AND STARTING A PRE-STORED RECIPE	15
11 • TEMPORARILY CHANGING A STORED RECIPE	16
12 • SETTING THE CORE PROBE	17
13 • AUTOMATIC HUMIDITY CONTROL SYSTEM	19
14 • PARTICULAR PROGRAMS	20
15 • OPERATING DETAILS	23
16 • USEFUL TIPS	24
17 • ROUTINE MAINTENANCE	25
18 • NON-ROUTINE MAINTENANCE	25
19 • SETTING THE DATE AND TIME	26
20 • DOWNLOAD HACCP LOG	26
21 • IMPORT/EXPORT RECIPES	27
• SPECIAL PROGRAMS - MANUAL AND AUTOMATIC CLEANING	28
24 • SPECIAL PROGRAMS - MANUAL CLEANING	29
25 • SPECIAL PROGRAMS - WASHING KIT	30
26 • DESCALING THE BOILER	32
27 • SELF-DIAGNOSIS AND FAULT IDENTIFICATION	34
28 • PRE-STORED RECIPES	38

VERSIONS

S - Manual electronic controls - Programmable with 99 programs, with automatic 4-cycle sequence - Cycle management key with 4 LED display - Alphanumerical displays - Over 90 tested and memorized recipes (Version S with core probe) - Direct access key to programs and recipes - AUTOCLIMA with automatic vent - Fast-Dry: Rapid humidity evacuation system - USB output - Self-diagnosis - Autoreverse (automatic inversion of fan rotation) - Controls for: humidifier, quick cavity cooling with door open, cavity lights, vent control - Standard semi-automatic washing program - Double-glass opening door

OPTIONAL: Core probe - Hand-held shower - Automatic LM washing system, with three washing intensities

The manufacturer accepts no liability for any inaccuracies in this manual attributable to printing or copying errors. We reserve the right to modify our products as we deem fit, without impairing their basic features.



The reproduction or copying of any part of this manual by any means whatsoever is strictly forbidden unless authorized previously in writing by the manufacturer.



- ORIGINAL INSTRUCTIONS -

1 • GENERAL REMINDERS


Repairs may become necessary over time; these and all major servicing operations must be performed exclusively by technicians employed by the manufacturer or an authorized service centre.

- 1.1 • **Carefully read** the directions given in this manual; they contain important information on safety during installation, operation and maintenance.
Keep this manual in a safe place for future consultation!
- 1.2 • This appliance must only be used **as specified in the design:** i.e. cooking foods. Any other type of use is improper and therefore dangerous.
- 1.3 • Only suitably trained kitchen personnel should be allowed to use the appliance.
- 1.4 • The oven must not be left unattended during operation.
- 1.5 • There are surfaces of the oven that become hot during operation. Take care!
- 1.6 • Ask the installer for information on correct operation and use of the water softener; incorrect or incomplete maintenance is at the origin of the formation of scale, which would badly damage the oven.
- 1.7 • Should it become necessary to call out a service technician, all essential identification details of the appliance are shown on the data plate, located at the right-hand side on the bottom.
- 1.8 • Each appliance is equipped with a data plate identifying the model and its main specifications. An example is given below of a dataplate for an electric oven and one for a gas oven.

<div>LOGO</div>		
TYP. XXXXXXXXX		
2010	NR XXXXXXXXXX	
3N AC 400V 50Hz		
1 x 0.25 kW	TOT 6.25 kW	kPa 200 - 500 
IPX 5 		

LOGO		
TYP. XXXXXXXXX		
2010	NR XXXXXXXXXX	
EN 203/A1	AC 230V 50Hz	
1 x 0.55 kW	TOT 1 kW	ΣQn 40 kW
A3 <input type="checkbox"/> B13 <input type="checkbox"/> B23 <input type="checkbox"/>	kPa 200 - 500 	
G 25 / m³/h	G 20 / m³/h	G 30 3.16 Kg/h
Pmax / mbar	Pmax / mbar	Pmin / mbar
Pmin / mbar	Pmin / mbar	Pmin / mbar
IT	Cat. II 2H3+	P mbar 20; 28-30/37
IPX 5  0085		

- 1.9 • In the event of technical assistance being required, **provide as much detailed information about the fault as possible** in order to facilitate the service technician in identifying and resolving the malfunction.
- 1.10 • In the event of breakdown or faulty operation, **switch off the oven immediately!**
- 1.11 • **The room** in which the oven is to operate **must be well ventilated!**
- 1.12 • Safety sticker
 - Maximum height for inserting containers with liquids.
 - **ATTENTION** to avoid scalding, do not use the containers filled with liquid or food which, through cooking become fluid, at levels higher than those which can be observed.

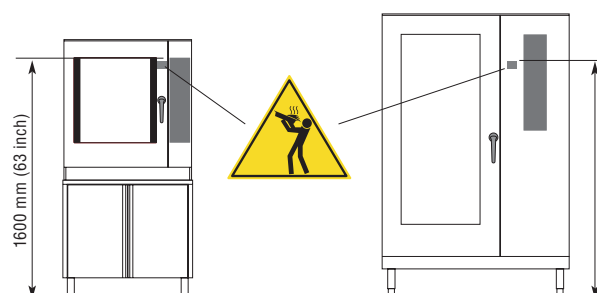

2 • POINTS TO REMEMBER

- 2.1 • Before any food is cooked in a new oven, the interior must be thoroughly cleaned (see “Daily Cleaning”).
- 2.2 • At the end of the working day, clean the oven thoroughly inside and out; this will ensure smooth operation of the appliance and prolong its useful life.
- 2.3 • **Do not use high pressure water jets when cleaning the oven!**
- 2.4 • For daily cleaning, use **only alkali based products** suitable for the purpose. Do not use abrasive materials or products as they will damage the oven surfaces.
- 2.5 • Always switch off the appliance when work is finished, shutting off all utilities (electricity, water, and gas if connected).
- 2.6 • **Avoid** any operation that might cause cooking **salt to be deposited** on the steel surfaces of the oven; if salt is accidentally spilled, rinse off thoroughly without delay.
- 2.7 • After steam cooking, **open the door carefully** to avoid being hit by the rush of residual steam escaping from the oven. Failure to observe this warning may be dangerous for the operator.
- 2.8 • To ensure safe operation of the oven, **do not obstruct the vents or any other opening on the oven!**



2.9 • CAUTION

No cooking with alcohol added is permitted!

- 2.10 • Failure to observe basic safety guidelines may jeopardize the smooth operation of the oven and expose the operator to serious danger!
The manufacturer accepts no liability if the original function of the oven is altered or there is tampering or failure to observe the instructions given in the manuals.

- 2.11 • **To ensure long term efficiency and reliability of the oven, scheduled servicing should be carried out at least once a year. With this in mind, customers are recommended to sign a service agreement.**

3 • DESCRIPTION OF KEYS

3.1 • CYCLES (KEY 1)

Allows to set, recall and display the cooking cycles.

The LEDs on with a fixed light indicate the cycles set.

The flashing LED indicates the cycle in progress.

3.2 • CONVECTION (KEY 2)

CONVECTION cooking mode key.

3.3 • STEAM (KEY 3)

STEAM cooking mode key.

3.4 • COMBI (KEY 4)

COMBI cooking mode key.

3.5 • FAN SPEED (KEY 5)

Fan speed selection key, normal with light off, reduced speed and power with light on.

3.6 • RECIPES (KEY 6)

Allows to set, recall and display the cooking programs, the memorised recipes and service programs (e.g. washing the oven).

3.7 • CORE PROBE (KEY 11)

Used to activate the core probe cooking setting.

3.8 • AUTOMATIC HUMIDITY CONTROL KEY (KEY 12)

This key also performs the function of a manual humidifier when pressed with cooking in progress (key light on).

This function is useful for foods that require added humidity when cooking. Press the key and hold for as long as it is wished to let moisture into the oven, the corresponding LED will light up for as long as the key is pressed.

Note: The appliance is fitted with an automatic system for reducing the cavity temperature in all cooking modes. If the temperature exceeds the display setting by 30°C, the humidifier automatically directs cold water into the oven and the temperature is rapidly lowered. This precludes the possibility that food could start cooking with too high a temperature in the oven. In addition, the added moisture prevents foods from drying up.

3 • DESCRIPTION OF KEYS

3.9 • OVEN STEAM EXTRACTION

VENT KEY (KEY 13)

This function is only activated in convection mode. Pressing the key opens the cavity vent, allowing the escape of moisture from the cavity. (LED on = vent open; LED off = vent closed, flashing LED = vent in operation).

The position of the vent (vent open/vent closed) can also be saved in several cycles of a program.

3.10 • OVEN LIGHT KEY (KEY 14)

Pressing this key switches on the oven light, permitting the operator to check the progress of the cooking.

3.11 • RAPID COOLING KEY WITH OVEN DOOR OPEN (KEY 15)

This function is activated only with the oven door open. Pressing the key activates the fan, which rapidly lowers the temperature in the oven to 50°C. This function is particularly useful if one cooking operation at high temperature is to be followed by another using a much lower temperature, or when the oven needs cleaning immediately after a cooking operation (see “*Daily Cleaning*”).

3.12 • MAIN SWITCH - START-STOP (KEY 15)

Press button **16** for 3 seconds

Allows the activation of the control panel, activates selfdiagnosis.

START-STOP button: allows to start and stop the cooking in progress.

- Button light on: START, cooking started.
- Flashing button light: TEMPORARY STOP obtained by opening the door. Cooking and remaining time stop. By closing the door, cooking starts again.
- Button light off: DEFINITIVE STOP obtained by pressing key **16**: cooking stops definitively as if the time has expired.

4 • MANUAL SETTINGS FOR ONE-PHASE COOKING

OPERATIONS

4.1 • SWITCH ON

Press button **16** for 3 seconds. Whenever a symbol appears in the anomalies display (display **7-9**) see the “Selfdiagnosis and anomalies key” chapter.

4.2 • COOKING MODE SELECTION

The cooking mode buttons LEDs flash: **press the button of the desired cooking mode (2 - 3 - 4)**. The selected cooking mode LED will remain on with a fixed light.

4.3 • SET THE TEMPERATURE

The temperature display shows a value of 130°C. **Turn knob 8** to set the temperature (to the right increases, to the left decreases), which will be shown in the display.

***Note:** Approximately 10 sec. after releasing the knob, the display will revert to the actual oven temperature.*

4.4A • SET THE TIME

The time display **9** shows [InF].

Turn knob 10:

- to the right to set the cooking time;
- to the left to set infinite time [InF].

Or

4.4B • SET CORE PROBE

See “Setting the core probe”.

The settings are saved approx. 10 seconds after the last setting.

4.5 • SAVING THE COOKING

If the cooking is to be memorised, hold button **1** down for 3 seconds, display **7** shows [REC], confirm memorisation by pressing knob **8**.

The program number where the cooking mode has been saved is shown on the display **7**.

4 • MANUAL SETTINGS FOR ONE-PHASE COOKING

STARTING THE COOKING PROGRAM

OPERATIONS

Place the food in the oven. Refer to the *"Practical Advice"* heading for more information.

If the core probe is to be used, refer to *"Setting the core probe"*.

4.5 • START

Press key 16 to start cooking: The LED associated with the key remains permanently alight.

At this point ...

the temperature display 7 indicates the actual oven temperature.

The time display 9 indicates the time remaining to complete cooking.

4.6 • END OF COOKING

If infinite time has been selected, stop cooking manually by pressing key **16** for a few seconds (LED next to key **16** OFF).

If a cooking time or core probe temperature has been entered, a beep will be generated when the time elapses or the set probe temperature has been reached to indicate that cooking has terminated (LED next to key **16** OFF).

To stop the signal just open the door or press a knob (**8 - 10**). Remove the food from the oven, following the directions given under paragraph 2.7 of the *"Points to remember"* heading.

Displaying and changing saved values

If, during cooking, it is necessary to check the settings, press key **1**, the displays will blink.

If the values displayed have to be modified, use the relevant knob or keys.

Press the knob to acquire the values modified or wait for about 10 secs. the new data is saved automatically, the displays are fixed on the real values.

Note: When switching on the appliance for the first time of the day, the steam generator drains the water contained, it turns on timed steam generator washing, then, after filling with water, it AUTOMATICALLY PREHEATS the steam generator. When starting a program that includes steam or combi cooking cycles, **the program is automatically started as soon as the steam generator has reached the preheating temperature** so as to avoid starting the program without any steam. The intermittent LED of key **16** indicates that the steam generator has not yet reached the preheating temperature.

5 • MANUAL SETTINGS FOR COOKING WITH UP TO 9 CYCLES IN SEQUENCE

OPERATIONS

5.1 • SWITCH ON

Press button 16 for 3 seconds. Whenever a symbol appears in the anomalies display (display 7-9) see the “Selfdiagnosis and anomalies key” chapter.

Note: cooking in manual mode with several phases in sequence allows the pre-heating of the empty cooking chamber before cooking: just set the cycle time 1 at **infinite [InF]**. On reaching the pre-heat temperature, a cyclic acoustic signal and **[LoA]** on the display inform that is time to use the oven. When the door is closed, the Cycles button 1 displays the second LED (2) flashing, which indicates activation of the cooking cycle 2.

5.2 • SELECT

The cooking mode buttons LEDs flash: **press the button of the desired cooking mode (2 - 3 - 4)**. The selected cooking mode LED will remain on with a fixed light.

5.3 • SET THE TEMPERATURE OF CYCLE 1

Turning knob 8 sets the cooking temperature, which is shown on the relevant display.

5.4A • SET THE TIME FOR CYCLE 1

The time display shows **[InF]**.

Turn knob 10:

to the right to set the cooking time;
to the left to set infinite time, **[InF]** thus utilizing the **first cycle as preheating**.

Or

5.4B • SET THE CORE PROBE FOR CYCLE 1

Refer to “Setting the core probe”.

5.5 • SELECT CYCLE 2 AND THE FOLLOWING ONES (UP TO 4 CYCLES)

Press the cycles button 1, the second flashing LED (2) switches-on on the cycles button. Proceed with setting as per paragraph 5.2. If other phases are desired, follow the same sequence.

5.6 • SAVING THE COOKING

If the cooking is to be memorised, hold button 1 down for 3 seconds, display 7 shows **[REC]**, confirm memorisation by pressing knob 8.

The program number where the cooking mode has been saved is shown on the display 7.

5 • MANUAL SETTINGS FOR COOKING WITH UP TO 9 CYCLES IN SEQUENCE

STARTING THE COOKING PROGRAM

OPERATIONS

5.6 • START

Press key 16 to start cooking: The LED associated with the key remains permanently alight.

At this point ...

the temperature display 7 indicates the actual oven temperature.

The time display 9 indicates the time remaining to complete cooking.

The luminous dot alongside the value indicates:

blinking = cooking in progress;

permanently alight = cooking suspended.

This occurs, for instance, when opening the door (refer to *“Operating Details”*).

5.7 • END OF COOKING

An acoustic signal informs that cooking has ended (LED at the side of button **16** OFF).

To stop the signal just open the door or press a knob (**8 - 10**).

Extract the product from the cooking chamber following the indications in paragraph 2.7 in the *“Particular indications”* chapter.

Displaying and changing saved values

If, during cooking, it is necessary to check the settings, press key **1**, the displays will blink.

If the values displayed have to be modified, use the relevant knob or keys.

Press the knob to acquire the values modified or wait for about 10 secs. the new data is saved automatically, the displays are fixed on the real values.

6 • ENTERING AND SAVING A PROGRAM

OPERATIONS

6.1 • SWITCH ON THE OVEN

Press button 16 for 3 seconds. Whenever a symbol appears in the anomalies display (display 7-9) see the “*Selfdiagnosis and anomalies key*” chapter.

6.2 • SELECT THE PROGRAM

Press the Recipes button 6, the display will show [ACC], turn the knob 8 until [Pro] is displayed and confirm by pressing the knob 8.

Turn the knob until the first free program is displayed (cooking mode LED flashing and also program number on the display 7 flashing) and confirm by pressing knob 8.

Caution

The program is “new” when the LEDs of the cooking mode buttons and the program number flash on the display 7.

The program is “busy” when one LED of the cooking mode buttons and the program number on the display 7 have a fixed light.

6.3 • SELECT

The cooking mode buttons LEDs flash: **press the button of the desired cooking mode (2 - 3 - 4).** The selected cooking mode LED will remain on with a fixed light.

6.4 • SET THE TEMPERATURE OF CYCLE 1

Turning knob 8 sets the cooking temperature, which is shown on the relevant display.

6.5A • SET THE TIME OF CYCLE 1

The time display shows [InF].

Turn knob 10:

to the right to set the cooking time;
to the left to set infinite time, [InF] thus utilizing the **first cycle as preheating.**

Or

6.5B • SET THE CORE PROBE FOR CYCLE 1

Refer to “*Setting the core probe*”.

6.6 • SELECT CYCLE 2 AND THE FOLLOWING ONES (UP TO 4 CYCLES)

Press the cycles button 1, the second flashing LED (2) switches-on on the cycles button. Proceed with setting as per paragraph 6.3. If other phases are desired, follow the same sequence.

6.7 • SAVING THE PROGRAM

Hold button 1 down for 3 seconds, display 7 shows [REC], confirm memorisation by pressing knob 8.

The program number where the cooking mode has been saved is shown on the display 7.

7 • SELECTING AND STARTING A SAVED PROGRAM

OPERATIONS

7.1 • SWITCH ON

Press button 16 for 3 seconds. Whenever a symbol appears in the anomalies display (display 7-9) see the “*Selfdiagnosis and anomalies key*” chapter.

CAUTION: If the program requires using the core probe, connect the probe to the front panel or the display will show “**Err SP**” (probe error). See “*self-diagnosis and fault identification*”.

7.2 • RETRIEVE

Press the Recipes button 6, the display will show **[ACC]**, turn the knob 8 until **[Pro]** is displayed and confirm by pressing the knob 8.

Turn the knob 8 to select the program number to be recalled (see following list of recipes), shown on the display 7.

7.3 • START

Viewing the settings

Whenever it should become necessary during cooking to control the values set for the current phase, press button 1. If the settings of the next phases are to be displayed, press button 1 and turn the knob until the display shows the phase of interest.

<p>7.3a • STARTING A PROGRAM WITH PREHEAT</p> <p>If the retrieved program has preheating, display 9 will show [InF].</p> <p>Press key 16 to start preheating. A beep and the inscription [LoA] on the display will signal when the oven has reached the temperature.</p> <p>Place the food in the oven (if the program includes cooking phases with the core probe, insert the probe in the food).</p> <p>Close the door.</p> <p>The Cycles 1 button shows the second LED (2) flashing, which indicates the activation of the cooking cycle 2.</p>	<p>7.3b • STARTING A PROGRAM WITH PREHEAT EXCLUDED</p> <p>Introduce the food (if the program envisions phases with core probe, insert the needle into the product).</p> <p>Start cooking by pressing button 16 (LED on with fixed light).</p> <p>Press button 1 for 3 seconds or turn knob 10 until the time is taken to zero.</p> <p>An acoustic signal and LED 2 flashing on button 1 indicate that the pre-heating phase has been excluded.</p> <p>Warning: pre-heating is not only necessary when the cooking chamber is already in temperature.</p>	<p>7.3c • STARTING A PROGRAM WITHOUT SAVED PREHEATING</p> <p>Place the food in the oven (if the program includes cooking phases with the core probe, insert the probe in the food).</p> <p>Start the first cooking cycle by pressing key 16 (LED on steady).</p>
--	---	--

8 • DELETING A SAVED PROGRAM

8.1 • SWITCH ON

Press button **16** for **3 seconds**.

8.2 • RETRIEVE

Press the Recipes button **6**, the display **7** will show **[ACC]**, turn the knob **8** until **[Pro]** is displayed and confirm by pressing the knob. Turn the knob **8** to select the program number to be recalled, shown on the display **7**.

8.3 • DELETING

Hold button **1** down for 3 seconds, display **9** shows **[DEL]**, confirm cancellation by pressing knob **10**.

When cancellation has taken place, the LEDs of the buttons **2 - 3 - 4** flash, indicating that the program is empty.

9 • TEMPORARILY ALTERING A SAVED PROGRAM

Foreword

The appliance permits temporarily modifying the saved program, that is for cooking in progress only. **The program to be changed must have been started (key 16 with LED on steady)!** When the program is stored for

a product with a different size, for which it is necessary to lengthen the cooking times, it may be necessary to raise the temperature or change any of the other parameters.

OPERATIONS

Retrieve the program and start cooking, as described previously.

To modify the memorised program:

Cooking mode

... press the key corresponding to the required cooking mode, wait for 10 seconds (TIME OUT) and the change will be saved automatically.

Increase/decrease temperature

... Turn the knob **8** to set the new temperature value, confirm by pressing the knob or wait 10 seconds (time out). The modification is saved automatically.

Increase/decrease time

... Turn the knob **10** to set the new temperature value, confirm by pressing the knob or wait 10 seconds (time out). The modification is saved automatically.

Increase/decrease core probe temperature

... Turn the knob **10** to set the new temperature value, confirm by pressing the knob or wait 10 seconds (time out). The modification is saved automatically.

Increase/decrease value

AUTOMATIC HUMIDITY CONTROL

... Press button **12**, the led flashes, set the new value by turning knob **10**, confirm by pressing the knob or wait for 10 seconds (time out). The modification is saved automatically.

Note: The program display **7** shows the temporary change with two steady luminous dots.

The change made is cancelled when the cooking time elapses: the program will remain in the original version.

10 • SELECTING AND STARTING A PRE-STORED RECIPE

OPERATIONS

10.1 • SWITCH ON

Press button **16** for 3 seconds.

10.2 • RETRIEVE

Press the Recipes button **6**. The display shows **[ACC]**, confirm by pressing the knob **8**.

Turn the knob **8** to select the recipe number to be recalled (see following list of recipes), shown on the display **7**.

IMPORTANT: if the recipe involves the use of the core probe, connect the probe to the front panel, otherwise the display will indicate the following fault **"Err SP"** (Core probe error) See chapter *"Self-diagnosis and fault identification"*.

10.3 • START

Viewing the settings

Whenever it should become necessary during cooking to control the values set for the current phase, press button **1**. If the settings of the next phases are to be displayed, press button **1** until the display shows the phase of interest.

10.3a •

STARTING A PROGRAM WITH PREHEAT

If the recipe selected includes a preheating phase, the display **9** shows **[InF]**.

Press button **16** to start pre-heating.

A cyclical acoustic signal and **[LoA]** on the display inform when the chamber has reached the temperature.

Introduce the food (if the program envisions phases with core probe, insert the needle into the product).

Close the door.

The Cycles button **1** shows the second LED (2) flashing, which indicates the activation of the cooking cycle 2.

10.3b •

STARTING A RECIPE WITHOUT PREHEATING

Place the food in the oven (if the recipe includes core probe cooking phases, insert the probe needle into the food).

Start cooking by pressing button **16** (LED on with fixed light). Press button **1** for 3 seconds or turn knob **10** until the time is taken to zero.

An acoustic signal and LED 2 flashing on button **1** indicate that the pre-heating phase has been excluded.

Warning: pre-heating is not only necessary when the cooking chamber is already in temperature.

11 • TEMPORARILY CHANGING A STORED RECIPE

Foreword

The appliance allows the user to make temporary modifications to a stored recipe, applying changes only to the cooking cycle in progress.

In order to make modifications, the recipe to be changed must first be started (button 16 with led on steady)!

This option can prove essential when the stored recipe is for a different size or weight of product, meaning that cooking time or temperature must be increased or another parameter changed.

OPERATIONS

Retrieve the stored recipe and start cooking as described previously.

To modify the memorised recipe:

Cooking mode

... press the key corresponding to the required cooking mode, wait for 10 seconds (TIME OUT) and the change will be saved automatically.

Increase/decrease temperature

... Turn the knob **8** to set the new temperature value, confirm by pressing the knob or wait 10 seconds (time out). The modification is saved automatically.

Increase/decrease time

... Turn the knob **10** to set the new temperature value, confirm by pressing the knob or wait 10 seconds (time out). The modification is saved automatically.

Increase/decrease core probe temperature

... Turn the knob **10** to set the new temperature value, confirm by pressing the knob or wait 10 seconds (time out). The modification is saved automatically.

Increase/decrease value

AUTOMATIC HUMIDITY CONTROL

... Press button **12**, the led flashes, set the new value by turning knob **10**, confirm by pressing the knob or wait for 10 seconds (time out). The modification is saved automatically.

Note: The program display **7** shows the temporary change with two steady luminous dots.

The change made is cancelled when the cooking time elapses: the program will remain in the original version.

12 • SETTING THE CORE PROBE

Foreword

The core probe allows cooking to be regulated by monitoring the temperature at the core of the product. This device overrides the time setting, and cooking stops as soon as the temperature at the core of the product reaches the selected value.

The core probe can be handily used as a portable thermometer, by inserting the probe in connection **17** in any time operation mode; with the oven on stand by, keeping key **11** pressed for a few seconds, display **9** will show the probe temperature for a few seconds. This permits checking the temperature at the core of the food not being cooked and therefore outside the oven.

OPERATIONS

12.1 • COOKING WITH CORE PROBE

Caution: When cooking with the core probe and “Err SP” is shown on displays **7** and **9**, it is necessary to connect the core probe to connection **17**. If the first cycle is used for preheating, it is necessary to keep the probe outside the cavity; otherwise the program cannot start.

Once the oven temperature has been set (as described under the relevant headings), press key **11** and turn knob **10** to set the required core temperature. Connect the core probe to connection **17**, insert the probe into the food (see “*Hints on using the core probe*”), and proceed according to the cooking mode selected.

Therefore, if you have chosen...

12.1 a • ONE-PHASE MANUAL COOKING:	12.1 b • MULTI-PHASE MANUAL COOKING:	12.1 c • A PROGRAM TO BE SAVED:
press key 16 to start cooking	pass on to setting the next phase or press key 16 to start the first phase of the set cooking	pass on to setting the next phase or wait for automatic saving of the set program

PRACTICAL EXAMPLE

Setting

Mode: **Convection**

Oven temperature: **140°C**

Time: **Infinite**

Core temperature: **78°C**

What happens

Once the temperature at the core of the food reaches 78°C, with the oven temperature at 140°C, the heat source shuts off and will automatically come into operation again when the core temperature drops by 1°C.

In practice, it is no longer the oven temperature setting that regulates the operation of the heat source, but the temperature selected for the core probe.

Caution: Wait for a few seconds after inserting the core probe in connection **17** (the time it takes the electronic card to identify the probe), then start cooking with key **16 START/STOP**.

12 • SETTING THE CORE PROBE



In cooking with this sensor, the position of the core probe is extremely important: The probe must be positioned from the top downwards at the centre of the food to cook and be fully inserted. In pieces whose thickness is less than twice the probe, which is inserted horizontally to the tabletop so that the tip of the probe is anyhow in the middle of the food (see figure).

It is also recommended to insert the probe with the food at the centre of the oven.

Optional: On request and without any specific adaptation, it is possible to connect a needle probe to control the temperature of vacuum-packed foods or small items.

Advantages

- Improves control over the cooking process, eliminating the risk of loss and waste;
- Permits accurate cooking irrespective of the quality or size of the product;
- Saves time because cooking control is automatic;
- Guarantees hygiene; with precision monitoring of the core temperature, there is no need for food to be handled, poked or prodded;
- Ideal for large items of food;
- Cooking precision to one degree centigrade for delicate foods such as: ROAST-BEEF;
- HACCP requirements always respected.

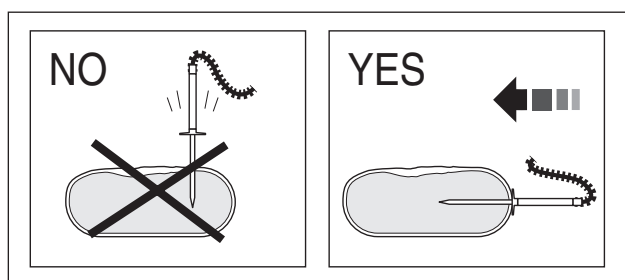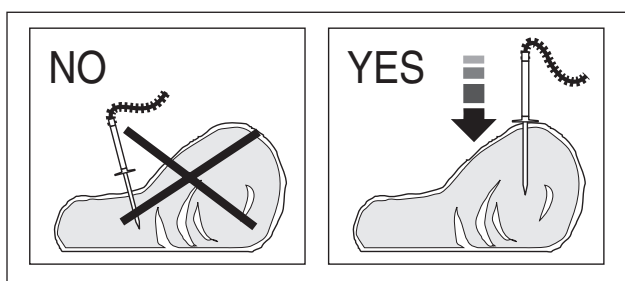

13 • AUTOMATIC HUMIDITY CONTROL SYSTEM

Foreword

The **AUTOCLIMA** makes it possible to keep a constant level of humidity in the oven when cooking by convection or with the combination cycle. It performs a double function, on the one hand introducing moisture, and on the other extracting moisture from the food when a set value is exceeded.

Especially advantageous for fresh products that cannot have the same moisture content from one day to another, but which when cooked will always have the same aspect and consistency: the level of humidity inside the cavity is constantly measured during the cooking phase and it remains constant. This system makes it possible to achieve consistent cooking results for the same food cooked in different quantities.

OPERATIONS

13.1 • COOKING WITH THE AUTOMATIC HUMIDITY CONTROL SYSTEM

Note: The cooking mode must be Convection or Combi

Once the cavity or core probe temperature has been set (as described under the relevant headings), press key **12** to set the desired **AUTOMATIC HUMIDITY CONTROL**, from **h00** (very dry) to **h99** (very humid).

Place the food in the oven and, if the core probe is being used, insert the probe (see "Setting the core probe"), connect the core probe to connection **17** and proceed according to the cooking mode selected.

Therefore, if you have chosen...

Note: The vent must be closed, because if it were set open (key **13**) it would cancel the setting of the humidity control.

Advice

Defining the humidity value requires a certain amount of practical experience. Nonetheless, it is impossible to commit a catastrophic error, and this function undoubtedly enhances the appearance of the food.

Ideal for:

Foods that tend to dry up, small items or foods that release excess humidity (e.g. roast chicken) and when reheating especially on a plate.

Advantages

Repeatable results, even when foods are cooked together with others having different characteristics.

<p>13.1 a • ONE-PHASE MANUAL COOKING: press key 16 to start cooking</p>	<p>13.1 b • MULTI-PHASE MANUAL COOKING: pass on to setting the next phase or press key 16 to start the first phase of the set cooking</p>	<p>13.1 c • A PROGRAM TO BE SAVED: pass on to setting the next phase or wait for automatic saving of the set program after 10 seconds (TIME OUT).</p>
---	---	--

14 • PARTICULAR PROGRAMS

Foreword

Their purpose is to complete a cooking process to obtain the best results, without the operator taking any direct action, in

terms of presentation, degree of cooking, reduction in weight loss, tenderness of the food to serve.

OPERATIONS

14.1 • HOLDING AT TEMPERATURE AT THE END OF COOKING

This function makes it possible to keep food warm when the LAST COOKING CYCLE has ended, enabling the operator to serve the food “warm at just the right time.” The cooking process stops, drying is halted as the temperature and humidity are controlled by the **AUTOMATIC HUMIDITY CONTROL SYSTEM**.

The succulence of the food remains undiminished, the holding precision is to one degree Celsius, consuming very little power ...

The best “HOLDING” results are obtained when the last cooking phase includes temperature control with the core probe.

[DRY]: holding with the oven vent open to permit drying the food;

[30]: holding with AUTOMATIC HUMIDITY CONTROL (AUTOCLIMA) on 30% (ideal HEAT AND HUMIDITY)

How to set:

Set a program as directed under the headings:

4 • MANUAL SETTINGS FOR ONE-PHASE COOKING

Or

5 • MANUAL SETTING FOR MULTI-PHASE COOKING IN SEQUENCE,

Make sure that the appliance is in DEFINITIVE STOP mode (button light **16** off), press button **1** until the last program cycle is selected.

Press knob **10** for 3 seconds, the display **7** shows **[HLD]** and display **9** shows **[OFF]**. By turning knob **10** it is possible to select the desired holding mode (**[DRY]** - **[30]**); press knob **10** to confirm the selection. The temperature in the chamber during holding is pre-set at 80°C.

If the set HOLDING function is to be eliminated, select the program, press button **1** until the last cycle of the program is selected, press knob **10** for 3 seconds. The display **7** shows **[HLD]** and display **9** shows the previously set holding mode. Turn knob **10** anti-clockwise until **[OFF]** is displayed and press knob **10** to confirm the selection.

14 • PARTICULAR PROGRAMS

OPERATIONS

HOLDING is the last cycle in the program, if the previous cycle is time based then HOLDING will automatically turn on at the end of the cooking cycle; if the cycle includes operation with the core probe, it will turn on when the set core temperature is reached.

During the HOLDING function display **7** will show the cavity temperature for a time-based program and display **9** will show the probe temperature for a core probe program.

Displays **7** and **9** will alternate the temperature display with the type of holding; the display **9** shows for how long holding has been on (increasing time).

During HOLDING the oven temperature is kept around 80°C, AUTOMATIC HUMIDITY CONTROL is automatically adjusted according to the type of holding selected. The temperature at the core of the food is kept as per the setting, and when there is no heating the fan turns alternately to a set time so that the heat and humidity in the oven remain well mixed to ensure optimal conditions.

The food will keep warm until you decide to stop the cycle.

Advice

Once cooked, food can of course only be kept warm for a limited period of time, which must not exceed current health and hygiene regulations.

It is not recommended for foods requiring special cooking (such as roast beef), since lengthy exposure to heat, even if moderate, could alter their colour.

14.2 • REHEAT PROGRAM

Foreword

Reheating plays a significant role in an organized system of kitchen management:

cooking → chilling → storing

→ reheating → service.

Foods can be reheated either in a pan or on a plate.

14.3 • FACTORY-SET PRE-STORED REGENERATION PROGRAMS

Version **S** comes equipped with factory-set pre-stored regeneration programs. The aim is to help the chef use the oven immediately.

How to set:

To set the regeneration program, follow the instructions given in chapter:

10 • SELECTING AND STARTING A PRE-STORED RECIPE.

The pre-stored regeneration programs are as follows:

- Timed

L53 = REGENERATION of plated foods

L54 = REGENERATION of trays

- With core probe

L87 = REGENERATION of plated foods

L88 = REGENERATION of trays

Advice

Reheating is intended as a process of warming previously cooked foods to a serving temperature of up to 65°C at the core. This must take place as quickly as possible, clearly observing the local health and hygiene regulations.

For deep-frozen and/or frozen products, the oven temperature is set to 160°C, the food is put into the oven and after a few minutes, when it becomes possible, you pass on to use the core probe; clearly, the program needs to be temporarily modified.

Advantages

This system makes it possible to present the food “freshly cooked”, as regards its appearance, flavour and firmness, even after a few days’ conservation at +3°C. The appliance is versatile as it can perform differentiated functions without the aid of additional equipment.

15 • OPERATING DETAILS

FOREWORD

During cooking (LED on steady) the displays show the actual values (current status). It is

anyhow possible to check the settings. For this purpose, proceed as follows:

OPERATIONS

15.1 • DISPLAYING SETTINGS DURING COOKING PHASE (without stopping)

Press key **1**, the displays blink showing the previous settings. After 10 sec. the actual values reappear (TIME OUT) so in general:
display blinking: value set.
display on steady: actual value.

15.2 • CHANGING THE SETTINGS DURING THE COOKING PHASE (WITHOUT STOPPING)

15.2 a • TEMPERATURE AND TIME To change the setting, turn the relevant knob to set the new value (increasing to the right, decreasing to the left); the displays show the settings that have just been made, after 10 sec. the actual values reappear.	15.2 b • COOKING MODE Press the key corresponding to the new cooking mode. The corresponding LED will light up.	15.2 c • HUMIDITY CONTROL Press the humidity control function key 12 (the display shows [h..], the previous setting). Turn knob 10 to make the new setting. After 10 sec. the actual values reappear.	15.2 d • CORE PROBE To change the setting, turn the knob 10 to set the new value. After the 10 seconds of TIME OUT the actual values reappear.
--	---	---	---

15.3 • TEMPORARY STOP

Open the door. Cooking stops, the time remaining to the end of cooking stops until the door is closed again. Cooking starts again from the point in which it was interrupted.

15.4 • PERMANENT STOP

To stop an infinite cooking time or interrupt it definitively, press key **16**.

16 • USEFUL TIPS

16.1 • PREHEATING THE OVEN

The oven preheating cycle is extremely important and useful for successful cooking.

As a general rule, always preheat the cavity when empty, setting the temperature between approximately 15% and 25% higher than that to be utilized subsequently in cooking.

In the case of steam cooking, preheat the empty cavity using convection mode as this will allow temperatures of over 130°C to be selected.

16.2 • COOKING LOADS

The depth of the pan must be suitable for the height of the food.

For even cooking, it is preferable to distribute the load over several shallow pans rather than loading just one extremely deep pan.

Keep to the weights specified in the following table.

Nr. pans	Maximum load per pan	Maximum oven load
4 x GN 2/3	2,6 kg	10,4 kg
5 x GN 1/1	4 kg	20 kg
6 x GN 1/1	4 kg	24 kg
7 x GN 1/1	4 kg	28 kg
10 x GN 1/1	4 kg	40 kg
7 x GN 2/1 14 x GN 1/1	4 kg	56 kg
10 x GN 2/1 20 x GN 1/1	4 kg	80 kg
20 x GN 2/1 40 x GN 1/1	4 kg	160 kg

Notes: Obviously, when loading the oven you should take account not only of the weight of the food, but also its size, consistency and thickness.

CAUTION

Do not insert pans/containers with liquids deeper than 1.6 m.

16.3 • FROZEN/DEEP-FROZEN PRODUCTS

The oven must be preheated and loaded respecting the quality and nature of these foods. For example, frozen spinach must not be hit with temperatures that are too high as, due to its nature, it could dry out on the outside and impair the result.

16.4 • TYPES OF CONTAINER

For optimum results, it is indispensable to use the right pan for the different kinds of food: aluminium or aluminium plate pans for confectionery and baked foods, perforated pans for steam cooking, mesh pans for pre-fried foods such as potatoes.

16.5 • CLEARANCE BETWEEN CONTAINERS

When loading the oven with the food to cook, it is recommended to pay special attention there is sufficient clearance between containers. This makes it possible for the heat and air to distribute evenly for a more uniform result, which would not be possible if the food in one pan were in contact with the pan above.

16.6 • LESS SEASONING

By using this type of oven it is possible to virtually eliminate the use of seasoning, oil, butter, fat and flavouring. With a minimum use of such ingredients in cooking, the natural flavours of the food are highlighted and the nutritional content remains intact; this brings the benefits of a more diet-conscious type of cuisine.



• CAUTION

No cooking with alcohol added is permitted!

17 • ROUTINE MAINTENANCE

17.1 • PERIODICALLY ...



... It is recommended to clean the deflector and pan racks as necessary.

For this purpose, proceed as follows:

- stop and shut off all utilities (electricity, water, and gas if connected);
 - take out the pan racks;
 - using a screwdriver of the right size, or a coin, unscrew the deflector screws to be able to clean the back; it is recommended to use the hand-held shower for thorough rinsing (optional);
 - dry with a clean cloth;
 - it is necessary to remove the deflector if the dirt is particularly tough to remove; do not use abrasives or scourers that would damage the steel surface; size permitting, wash the deflector in a dishwasher.
- Secure the deflector in the oven, making sure the two fixing screws on the right-hand side are well tightened.

17.2 • PROLONGED DISUSE

If the oven is to stand idle for any length of time (e.g. holidays or seasonal closing) it must be cleaned thoroughly, leaving no traces of food or dirt. Leave the door slightly ajar so that air can circulate inside the oven. Be absolutely certain to shut off all utilities (electrical power supply, water, and gas if connected). For added care after cleaning, the external surfaces can be protected by applying a proprietary metal polish.

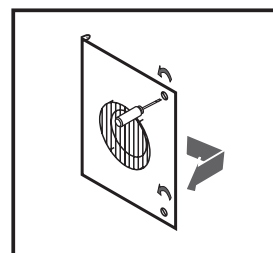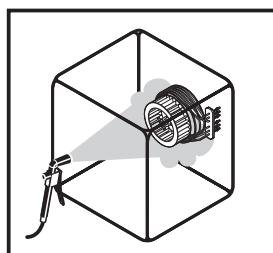

18 • NON-ROUTINE MAINTENANCE

- 18.1 •** To ensure correct and safe operation, the oven must be inspected and serviced at least once a year by a manufacturer technician or authorized service agent.

- 18.2 •** With this in mind, customers are recommended to sign a service agreement.

19 • SETTING THE DATE AND TIME

OPERATIONS

19.1 • With the appliance live and display off, press button **6**, the display **7** shows **[USb]**, turn knob **8** until **[tIM]** is displayed, press the knob to confirm the selection.

- **Setting the hour**

The display **7** shows **[h]**, and display **9** shows the time set.

Turn the knob **10** to modify the hour

- **Setting the minutes**

Turn the knob **8** again, display **7** shows **[Min]** and display **9** shows the minutes set.

Turn the knob **10** to modify the minutes

- **Setting the day**

Turn the knob **8** again, display **7** shows **[dAY]** and display **9** shows the day set.

Turn the knob **10** to modify the day

- **Setting the month**

Turn the knob **8** again, display **7** shows **[Mon]** and display **9** shows the month set.

Turn the knob **10** to modify the month.

- **Setting the year**

Turn the knob **8** again, display **7** shows **[YEA]** and display **9** shows the year set.

Turn the knob **10** to modify the year

Once the date and time has been set, press button 6 to memorise the values.

20 • DOWNLOAD HACCP LOG

OPERATIONS

20.1 • With the appliance live and display off, press button **6**, the display **7** shows **[USb]**, turn knob **8** to confirm the selection

The display **7** shows **[hAC]**.

Loosen the protection screws of the USB port until the protective plate is rotated by 90° in order to have access to the USB port. Insert the pen drive into the oven USB port.

Press the knob **8** to confirm the selection.

When download has been completed, the displays **7** and **9** show **[USB END]**

ATTENTION: When the USB pen drive has been removed, reposition the protective plate and tighten the protection screws.

If the USB pen drive is not inserted, the displays **7** and **9** show **[USB Err]**.

Insert the USB pen drive and press knob **8** to repeat the procedure.

21 • IMPORT/EXPORT RECIPES

OPERATIONS

21.1 • IMPORTING RECIPES FROM USB PEN DRIVE

With the appliance live and display off, press button **6**, the display **7** shows **[USb]**, turn knob **8** to confirm the selection

The display **7** shows **[hAC]**, turn the knob until **[IMP]** is shown.

Loosen the protection screws of the USB port until the protective plate is rotated by 90° in order to have access to the USB port. Insert the pen drive into the oven USB port.

Press the knob **8** to confirm the selection.

When import has been completed, the displays **7** and **9** show **[USB End]**.

ATTENTION: When the USB pen drive has been removed, reposition the protective plate and tighten the protection screws.

If the USB pen drive is not inserted, the displays **7** and **9** show **[USB Err]**.

Insert the USB pen drive and press knob **8** to repeat the procedure.

21.2 • EXPORTING RECIPES ONTO USB PEN DRIVE

With the appliance live and display off, press button **6**, the display **7** shows **[USb]**, turn knob **8** to confirm the selection

The display **7** shows **[hAC]**, turn the knob until **[ESP]** is shown.

Loosen the protection screws of the USB port until the protective plate is rotated by 90° in order to have access to the USB port. Insert the pen drive into the oven USB port.

Press the knob **8** to confirm the selection.

When import has been completed, the displays **7** and **9** show **[USB End]**.

ATTENTION: When the USB pen drive has been removed, reposition the protective plate and tighten the protection screws.

If the USB pen drive is not inserted, the displays **7** and **9** show **[USB Err]**.

Insert the USB pen drive and press knob **8** to repeat the procedure.

SPECIAL PROGRAMS

MANUAL AND AUTOMATIC CLEANING

- **THOROUGH CLEANING ...**

... is a prerequisite for faultless cooking and better yields:

- the food's own flavour remains unchanged;
- during operation there are no fumes caused by burnt food residue;
- energy savings;
- less maintenance work and a longer service life;
- the simplicity of the procedure means that a thorough clean can be carried out quickly and with minimum inconvenience to the operator:


- **CAUTION**

Never use direct or high-pressure jets of water to clean the outside of the oven.

Never use corrosive and/or abrasive substances on steel surfaces, and avoid scouring or scrubbing with steel wool or wire brushes, as this could result in irreparable damage. Similarly, **aggressive detergents**, of non-alkaline formulation containing high percentages of sodium and ammonia, **can soon damage the seals, jeopardizing oven efficiency and operation.**

The outside of the oven should be washed with a sponge and warm water with an ordinary detergent suited to the purpose.


- **It is recommended to use a specially formulated detergent.**

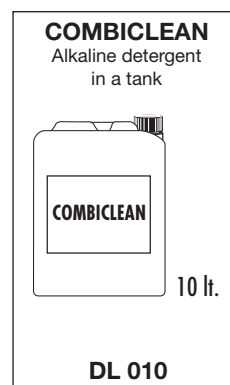

SPECIAL PROGRAMS

22 • MANUAL CLEANING

22.1 • EXECUTING THE MANUAL CLEANING CYCLE [CL]

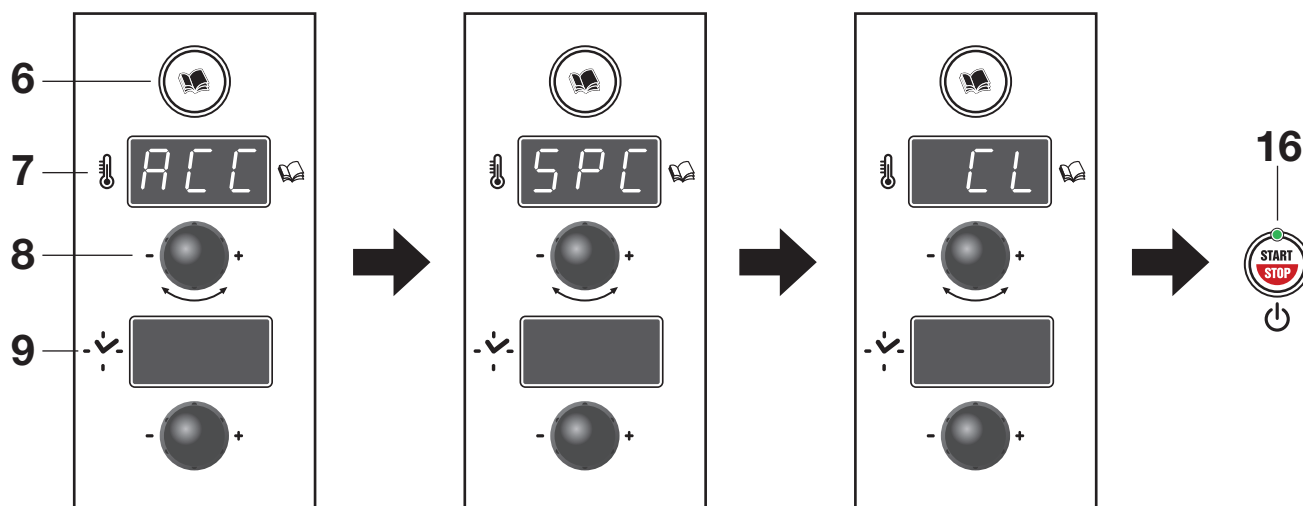

Press the Recipes button **6**,


the display will show **[ACC]**, turn the knob **8** until **[SPC]** is displayed and confirm by pressing the knob.

Turn the knob **8** to the right until the **[CL]** message appears.

Press button **16** to activate the **MANUAL** washing program, simplified successively.

The display shows **[rAF]** if the oven temperature is high, **[Att]** if the oven temperature is low, on reaching the temperature, it shows **[dEt In]**, the

light of key **16** blinks to indicate a **TEMPORARY STOP**, a beep signals it is time to open the door and spray detergent in the oven.

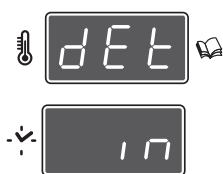

Close the door and press key **16** to turn the wash cycle back on, after which the operator needs to take no other action until the end of the program.

If considerable deposits form on the drain filter in the middle of the bottom of the cavity, clean so as to ensure water and detergent flow out freely.

The end of the program is defined by a cyclic beep, open the door to turn it off.

Switch off the appliance with key 16.

It is a good rule at the end of the washing cycle to rinse the inside of the oven again with the shower (optional), wipe the front seal of the oven with a sponge or cloth to protect it from early deterioration.

SPECIAL PROGRAMS

23 • WASHING KIT

The device with Cleaning Kit allows the operator to execute three cleaning cycles for the cooking compartment: **“SC” SOFT CLEANING** (for NORMAL dirt) - **“MC” MEDIUM CLEANING** (for THICK dirt) - **“HC” HARD CLEANING** (for STUBBORN dirt) without having to intervene in the cleaning processes directly.


The detergent is evenly distributed through the special nozzle at the right time, avoiding any risk of contact with the operator.

Using detergents other than the one recommended by the manufacturer is advised against because it might not ensure good cleaning and could damage the integrity of the washing system.

Make sure that the coupling for the detergent is properly inserted and the tank is supplied with enough of the detergent recommended by the manufacturer.

Activate automatic cooling with key **15** if the oven is very hot.

23.1 • EXECUTING THE AUTOMATIC CLEANING CYCLE [SC] - [MC] - [HC].

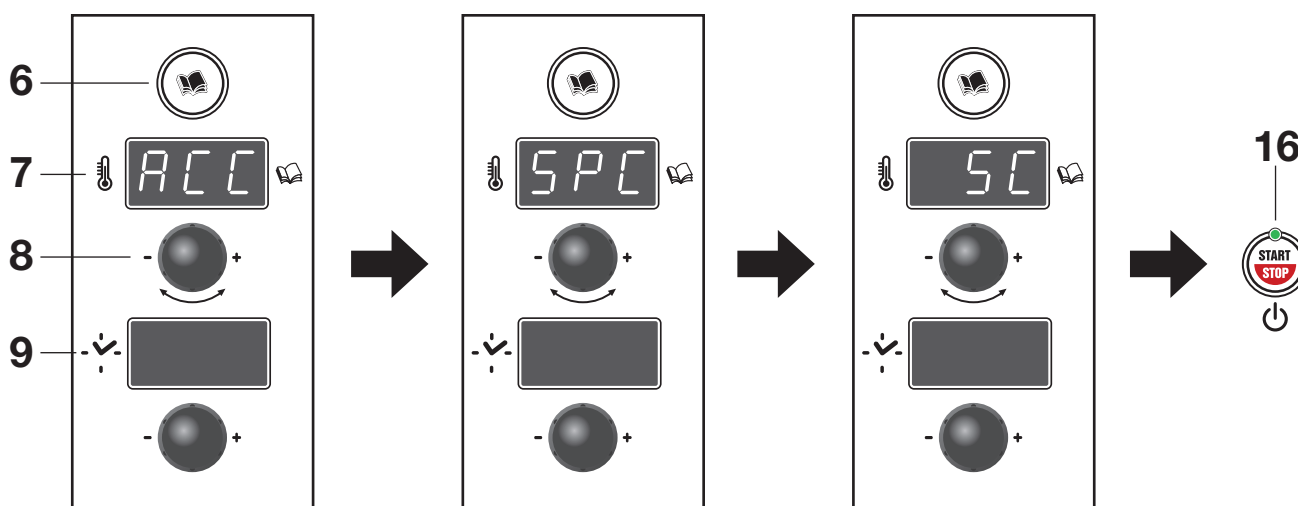

Press Recipe button **6**,

[ACC] appears on the display **7**. Turn the knob **8** to the left until you see **[SPC]** and press the knob to confirm.

Turn the knob **8** to the right to select the required cleaning cycle: **SOFT [SC]**, **MEDIUM [MC]**, or **HARD [HC]**.

Press button **16** to start the cleaning program you have just selected.

SPECIAL PROGRAMS

23 • WASHING KIT

the display shows **[rAF]** if the oven temperature is high, **[Att]** if the oven temperature is too low

The **SOFT [SC]**, **MEDIUM [MC]** e **HARD [HC]** programs are an automatic sequence of cycles (working time and remaining time to the end of the program are visualized on display **9**), to provide the best combined action of cleansing, steam cycle, rinsing alternated with the steam cycle, final rinsing combined with ventilation and drying to make the oven cavity dry and shiny.

If considerable deposits form on the drain filter placed at the center of the cavity bottom, clean so as to ensure water and detergent flow out freely.

The end of the **SOFT** clean program is defined by a cyclical audible warning.

Switching off the appliance with key 16 is not permitted during operation of the **SOFT CLEAN**, **MEDIUM CLEAN** and **HARD CLEAN** programs; wait for the end of washing signal, to be able to switch off the appliance.

Wipe the front seal of the oven with a sponge or cloth to prevent it from deteriorating too soon.

Stop and shut off all utilities (electrical power supply, water, and gas if connected). Leave the door slightly ajar when the appliance is not in use.

24 • DESCALING THE BOILER (if present)

The appliance can count the functioning hours of the steam generator and therefore inform the operator when it is necessary to activate de-scaling of the steam generator via the special cycle **[dE]**.

When the appliance is switched off, the display **7** shows the **[dE]** message and display **9** shows the days missing until recommended de-scaling of the boiler, indicated by the **[dE End]** message.

NOTE: Display **9** indicates the DAYS missing until the appearance of the **[dE End]** message.

The message starts to appear 15 days before the appearance of the **[dE End]** message.

The **[dE End]** message does not stop the appliance definitively for obvious service reasons. It is however recommended to activate the **[dE]** program as soon as possible after the appearance of the **[dE End]** message.

To check the amount of hours missing until the appearance of the **[dE End]** message, with the appliance live and display off, press button **6**. The display **7** shows **[USb]**, turn knob **8** until **[hrS]** is displayed, press the knob to confirm the selection.

The display **7** shows **[P00]**, turn knob **8** until the display shows **[dE]**. The display **9** shows the hours missing until the appearance of the **[dE End]** message.

The presence of scale causes loss of power in the steam circuit and serious damage to the steam generator.

Note that the steam generator runs a drain and wash cycle automatically every day so as to regenerate the water in it. Descaling frequency is defined by several parameters entered on the electronic card by the technician at the time of installation on the basis of the characteristics of the supply water (upstream from the softener) and on the basis of its technical characteristics.

The end of the **[dE]** descaling cycle permits resetting the total number of hours and the removal of the message: to permit this operation, disconnect the oven from the electric mains for a few seconds after the end of the descaling program.

Descaling should be performed with the appliance cold and clean (see “Daily Cleaning”), preferably with the assistance of the authorized technician.


Activation of de-scaling cycle **[dE]**

With the appliance live and display off, press button **6**. The display **7** shows **[USb]**, turn knob **8** until **[bOI]** is displayed, press the knob to confirm the selection.

The displays **7** show **[dE]**. Press button **16** to activate the de-scaling cycle **[dE]**.

The display shows **[Att]** wait, the automatic operations of boiler draining and washing are activated, then **[dEt In]** appears with a cyclical audible warning telling the operator to add the descaling agent after unscrewing the cap **A** (the dilution per litre, if necessary, should be done following the directions of the manufacturer of the product), observing the capacity of the boiler, see table:

	GAS	ELECTRIC
Models	Litres	Litres
6 x GN 1/1	2.5	3.5
7 x GN 1/1	2.5	3.5
7 x GN 2/1	-	11
10 x GN 1/1	4	11
10 x GN 2/1	6	12.5
20 x GN 1/1	6	18
20 x GN 2/1	20.5	30

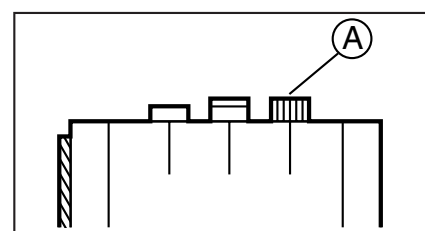

Close the cap “A”.

24 • DESCALING THE BOILER (if present)

24.1 • DESCALING ACTION

Press key **16**; the boiler fills to capacity with water mixed with descaling detergent.

“CYCLE 1”: This is the first automatic cycle permitting the boiler to heat up and hold its temperature for 30 minutes (countdown on display **7**) so the descaling agent can act effectively, after which time the boiler drains off the content (impurity of detergent mixed with water). Check that it flows out freely, if it does not then call in the technical assistance service as the drain could be blocked and the boiler need servicing. This problem is also indicated on displays **7-9** (see “Self-diagnosis and fault identification”).

Afterwards the boiler is cleaned of the more resistant particles of scale by forcing in normal tap water, then it loads cleaned water.

“CYCLE 2”: This is the second automatic cycle that permits operating the oven with steam for 25 min. so as to thoroughly cleanse the steam generator and the pipes for introducing steam into the oven. The cycle is completed with the phases of: drain boiler, wash boiler by introducing ordinary mains water and filling with cleaned water.

Important:

*The above sequence ensures thorough cleaning of the steam generator that is ready for use, any faults found during the cycle will be signalled on display **7** and **9**, **at which stage the appliance must NOT be used until an authorized technician has seen it!***

The correct conclusion of the program is indicated by the **[End]** message. Press button **6** to exit the **[dE]** program. The amount of hours missing until a new de-scaling cycle is updated at the same time.

Caution:

This operation must be carried out under the close supervision of the operator!

The operator must adhere strictly to the precautions (mask, gloves etc.) for use of the product!

The descaling cycle must not be interrupted for any reason!

Interrupting the cycle renders the whole process ineffective, wastes descaler, and provokes the risk of contamination if the descaler has not been completely flushed out of the boiler. An interruption will also prevent the electronic control from resetting the boiler hour-counter to zero.

It is advisable to thoroughly rinse the cavity with the shower at the end of the program.

 
 
25 • SELF-DIAGNOSIS AND FAULT IDENTIFICATION

25.1 • Whenever the appliance is powered up by pressing the main switch, an electronic diagnostics routine is run automatically to check the principal functions. Assuming the appliance is in perfect working order, the oven temperature display shows the actual temperature in the oven, and the LEDs of the cooking mode keys all blink. At this point the cooking parameters can be entered.

25.2 • If any irregularities are discovered, on the other hand, these are indicated in the displays **7-9**. Error codes are extremely important when trouble cannot be remedied by the operator, since they give the service technician an indication as to the nature of the fault. The message on the display is accompanied by a beep of 5 seconds, repeated every minute, until the oven is switched off.



The main fault warning messages are:

MESSAGES





“ Err SC ”

  Message on the **displays 7 and 9**. Oven temperature probe faulty, **switch off the oven immediately** and contact a manufacturer technician or authorized service agent.





“ Err Sb ”

  Boiler pre-heating probe fault; oven can only be operated in convection mode; **steam and combined modes are disabled**. Call in the technical assistance service.



“ Err Sd ”

  Vapour condensation temperature probe faulty. The condenser is in operation continuously, but the oven can still be used under **close observation** (increased water consumption), until the arrival of a service technician.



“ Err SP ”

Core probe faulty. Should the message appear, it is necessary to check the connector is plugged into the socket (17) properly. The oven can continue to be used until the arrival of a service technician, but without this accessory.

25 • SELF-DIAGNOSIS AND FAULT IDENTIFICATION

The main fault warning messages are:

MESSAGES



“ no H2o ”

This means there is no water: **check** that the shutoff valve is open and that there is water still coming from the main. If there is no supply from the main, inform the water company or agency. If there is no problem with the main, contact a manufacturer technician or authorized service agent. In the meantime, the oven can still be used in convection mode.



“ Er 1 ”

The device **preventing thermal overload of the motor has cut in**. **Switch off the oven immediately** and contact a manufacturer technician or authorized service agent.



“ Er 2 ”

The oven safety **thermostat has cut in**. **Switch off the oven immediately** and contact a manufacturer technician or authorized service agent.



“ Er 3 ”

The boiler safety thermostat has cut in, switch off the oven immediately and contact a manufacturer technician or authorized service agent.



“ Er 7 ”

An abnormally **high temperature rise** has registered in the compartment housing electrical **components**. The oven can still be used under close observation, until the arrival of a service technician.



“ Er 8 ”

An **excessive temperature rise** registering in the electrical components compartment could result in damage to components. **Switch off the oven immediately** and contact a manufacturer technician or authorized service agent.




“ doP ”

It appears when the door is open and signals that the door microswitch fails to close the contact. Check that the door is properly closed. If the signal persists, all the technical service.

25 • SELF-DIAGNOSIS AND FAULT IDENTIFICATION


The main fault warning messages are:

MESSAGES

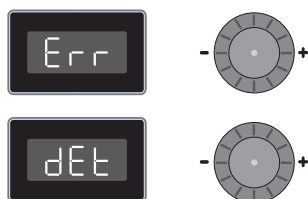

“ Err dEt ”


Check that the container of detergent is not empty and the detergent is withdrawn correctly. If the signal persists, call the technical after-sales service.

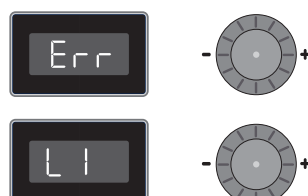

“ Err L1” - “ Err L2” - “ Err L3”


Steam generator malfunctioning.

Switch the oven off immediately and call the technical after-sales service.

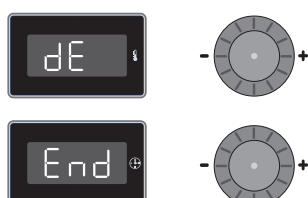


“ dE End”

Appears on appliance switch-off and indicates the requirement to indicate the steam generator de-scaling cycle.

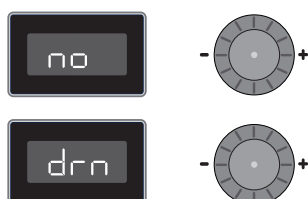


“ no drn ”

Signals that water has not been drained from the steam generator. If the fault appears during the de-scaling program [dE] **it will interrupt appliance functioning**. Call the technical after-sales service.

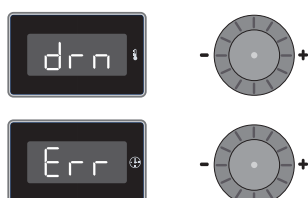


“ drn err ”

Drain error. Switch the machine off and back on again to repeat the unload procedure. If the signal persists, call the technical after-sales service.

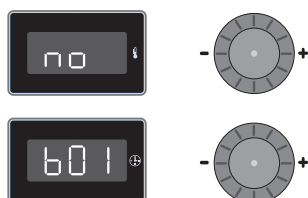

“ NO bO1 ”

The boiler is disabled as the drain procedure was not performed correctly. Call the technical after-sales service.

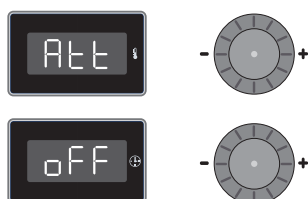

“ Att oFF ”


The appearance of the [Att OFF] message indicates that the steam generator is carrying out the procedures predefined daily boiler washing. Wait for the end of the procedure.

25 • SELF-DIAGNOSIS AND FAULT IDENTIFICATION

The main fault warning messages are:


MESSAGES

WARNING FOR GAS MODELS

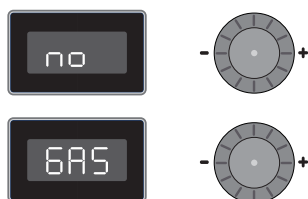


“ no GAS ”

No gas. Check that the shutoff valve is open and that there is gas coming from the main. If there is no supply from the main, inform the gas company or agency. If there is no problem with the main, contact a manufacturer technician or authorized service agent.

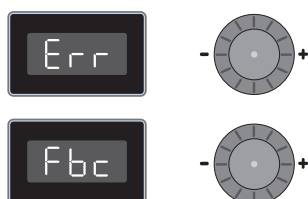

“ Err Fbc - Err Fbb ”


Gas appliances are fitted with ignition devices incorporating an automatic reset function. If automatic restore does not take place after several attempts, displays **7** and **9** will show the error code [**Err Fbc**] for chamber burners or [**Err Fbb**] for boiler burners, given in the margin. An acoustic signal warns the operator. Press key **16** to restore ignition. If the fault persists, contact a manufacturer technician or authorized service agent.

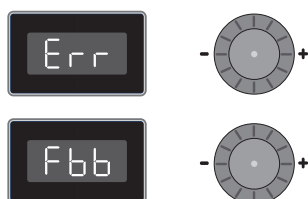

Note: Burner shutdown is a safety condition. Therefore, this situation is not a sign of the appliance malfunctioning.

If, after carefully carrying out these checks, the appliance still does not function properly, call a manufacturer technician or authorized service agent.

Note: When contacting manufacturer service technicians, try to explain the fault in as much detail as possible, referring all the information indicated on the identification data plate.

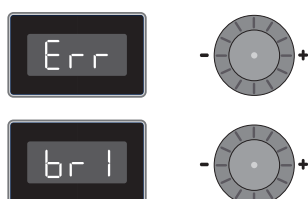

“ Err brx ”

Burners Alarm.

Switch the oven off immediately and call the technical after-sales service.

Note: x indicates the number of the burner in alarm conditions.

- TIMED RECIPES

First courses

- L01** Crepes/Cannelloni
- L02** Gnocchi alla romana
- L03** Steamed rice
- L04** Paella

Simmered sauces

- L05** Tomato sauce
- L06** Bolognese sauce

Meats

- L07** Shin of pork and whole veal
- L08** Stew, ossobuco, braised meat
- L09** Roast rabbit
- L10** Pork chops
- L11** Cutlets
- L12** Grilled meat
- L13** Breaded meats
- L14** Meat kebabs

Fish and Shellfish

- L15** Steamed shellfish and molluscs
- L16** Steamed octopus, squid
- L17** Steamed spider crab or crab
- L18** Stewed whole fish
- L19** Filleted fish and au gratin
- L20** Grilled fish
- L21** Fish kebabs

Poultry

- L22** Roast chicken in pieces
- L23** Braised chicken and rabbit
- L24** Roast chicken
- L25** Fried chicken

Vegetables

- L26** Steamed vegetables
- L27** Vegetables in oil, garlic and parsley
- L28** Vegetables au gratin
- L29** Grilled vegetables

Potatoes

- L30** Fresh roast potatoes
- L31** Frozen roast potatoes
- L32** Steamed potato pieces
- L33** Braised potatoes
- L34** Fried potatoes

Eggs

- L35** Soft boiled egg
- L36** Hard boiled eggs
- L37** Fried egg
- L38** Omelettes
- L39** Crepes
- L40** Sweet/savoury soufflé
- L41** Savoury pie

Confectionery & Bread

- L42** Sponge cake/Shortcrust pastry/Tarts
- L43** Puff pastry, strudel, vol au vent
- L44** Croissants, muffins, small strudels
- L45** Meringues
- L46** Bignè
- L47** Creme caramelle, Bounet
- L48** Fresh bread
- L49** Genoese focaccia
- L50** Frozen bread
- L51** Fresh pieces of pizza
- L52** Fresh round pizza

Re-heating

- L53** Re-heating on plate
- L54** Re-heating on tray

Vacuum Cooking

Vacuum packed fruit and vegetables

- L55** Fruit pieces
- L56** Pieces of pear
- L57** Custard
- L58** Fresh green vegetables
- L59** Fresh vegetables
- L60** Pieces of potato

Vacuum packed meat

- L61** Stewed and nighttime cooking

Pasteurisation in vacuum packing

- L62** Low pasteurisation
- L63** High pasteurisation

- RECIPES WITH CORE PROBE

First courses

L64 Lasagne/Aubergine Parmigiana

Meats

L65 Traditional roasts

L66 Slow cook traditional roasts

L67 Roast-beef and whole fillets

L68 Roast meats with rind

L69 Slow cooking roast meats with rind

L70 Leg of Lamb

L71 Braised meat and pot roasts

L72 Grilled ribs/fillet

L73 Grilled pork/veal fillet

Fish and Shellfish

L74 Steamed lobster

L75 Steamed whole fish

L76 Medium sized fish

L77 Large fish

Potatoes

L78 Steamed potatoes

L79 Potatoes cooked in foil

Poultry

L80 Leg of turkey/goose

L81 Roast duck, pheasant, guinea-fowl

L82 Roast chicken

L83 Speedy chicken

L84 Roast chicken in pieces

Confectionery & Bread

L85 Filled tarts/apple pie

L86 Pan Brioche

Re-heating

L87 Re-heating on plate

L88 Re-heating on tray

Vacuum Cooking

Vacuum packed meat

L89 Low temperature meat

L90 Traditional roasts

L91 Poultry and game

Vacuum packed fish

L92 Whole fish/bowls

N.B.: Recipes with core probe are only displayed if the oven is actually equipped with a core probe.

26 • PRE-STORED RECIPES



Cooking cycle



% of humidity / Vent position



Vent closed

Mode



Convection cooking mode



Steam cooking mode



Combi convection/steam cooking mode



Oven temperature



Cooking time



Core temperature



Ventilation speed (* where present)



Standard speed



Reduced speed

TIMED RECIPES

L01 Crepes/Cannelloni

		Mode					
1			170°C	10'	--	60%	
2			190°C	5'	--	20%	

L04 Paella

		Mode					
1			170°C	15'	--	20%	
2			195°C	5'	--	--	

L02 Gnocchi alla Romana

		Mode					
1			200°C	15'	--	10%	

L05 Tomato sauce

		Mode					
1			150°C	90'	--	70%	

L03 Steamed rice

		Mode					
1			100°C	15'	--		

L06 Bolognese sauce













		Mode					
1			150°C	150'	--	70%	

Note: Always pre-heat the oven!









26 • PRE-STORED RECIPES

TIMED RECIPES











L07 Shin of pork and whole veal

		Mode					
1			100°C	5'	--	--	
2			130°C	90'	--	70%	
3			180°C	10'	--	70%	













L08 Stew, ossobuco, braised meat

		Mode					
1			150°C	120'	--	70%	

L09 Roast rabbit

		Mode					
1			160°C	20'	--	40%	
2			180°C	15'	--	20%	

L10 Pork chops

		Mode					
1			130°C	15'	--	70%	
2			150°C	15'	--	50%	
3			180°C	15'	--	60%	









L11 Cutlets

		Mode					
1			160°C	12'	--	40%	









L12 Grilled meat

		Mode					
1			250°C	6'	--	10%	








L13 Breaded meats

		Mode					
1			195°C	9'	--	20%	










L14 Meat kebabs

		Mode					
1			190°C	17'	--	20%	




L15 Steamed shellfish and molluscs

		Mode					
1			95°C	8'	--		











L16 Steamed octopus, squid

		Mode					
1			95°C	90'	--		









L17 Steamed spider crab or crab

		Mode					
1			95°C	20'	--		

L18 Stewed whole fish

		Mode					
1			155°C	15'	--	30%	
2			175°C	10'	--	20%	









L19 Filleted fish and au gratin










		Mode					
1			210°C	10'	--	50%	









Note: Always pre-heat the oven!











26 • PRE-STORED RECIPES











TIMED RECIPES










L20 Grilled fish						
	Mode					
1		240°C	8'	--	40%	











L26 Steamed vegetables						
	Mode					
1		100°C	15'	--		









L21 Fish kebabs						
	Mode					
1		195°C	12'	--	30%	













L27 Vegetables in oil, garlic and parsley						
	Mode					
1		170°C	10'	--	30%	
2		180°C	15'	--	10%	











L22 Roast chicken in pieces						
	Mode					
1		200°C	20'	--	60%	
2		220°C	15'	--	20%	









L28 Vegetables au gratin						
	Mode					
1		190°C	5'	--	40%	
2		210°C	10'	--	10%	









L23 Braised chicken and rabbit						
	Mode					
1		160°C	60'	--	60%	
2		170°C	15'	--	40%	

L29 Grilled vegetables						
	Mode					
1		240°C	8'	--	20%	

L24 Roast chicken						
	Mode					
1		165°C	30'	--	50%	
2		185°C	15'	--	10%	
3		220°C	10'	--	10%	

L30 Fresh roast potatoes						
	Mode					
1		170°C	8'	--	50%	
2		190°C	22'	--	10%	

L25 Fried chicken						
	Mode					
1		190°C	15'	--	20%	

L31 Frozen roast potatoes						
	Mode					
1		220°C	22'	--	10%	

Note: Always pre-heat the oven!

26 • PRE-STORED RECIPES

TIMED RECIPES

L32 Steamed potato pieces

		Mode					
1			100°C	20'	--		

L39 Crepes

		Mode					
1			210°C	2'	--	10%	

L33 Braised potatoes

		Mode					
1			170°C	30'	--	50%	

L40 Sweet/savoury soufflé

		Mode					
1			175°C	18'	--	30%	

L34 Fried potatoes

		Mode					
1			210°C	7'	--	30%	
2			195°C	7'	--	10%	

L41 Savoury pie

		Mode					
1			160°C	30'	--	10%	

L35 Soft boiled egg

		Mode					
2			100°C	7'	--		

L42 Sponge cake/Shortcrust pastry/Tarts

		Mode					
1			160°C	15'	--	--	
2			170°C	15'	--	--	

L36 Hard boiled eggs

		Mode					
1			100°C	12'	--		

L43 Puff pastry, strudel, vol au vent

		Mode					
1			170°C	10'	--	20%	
2			180°C	15'	--	10%	

L37 Fried egg

		Mode					
1			140°C	5'	--	--	

L44 Croissants, muffins, small strudels

		Mode					
1			160°C	3'	--	30%	
2			170°C	15'	--	10%	









L38 Omelettes











		Mode					
1			170°C	12'	--	30%	











Note: Always pre-heat the oven!











26 • PRE-STORED RECIPES











TIMED RECIPES





L45 Meringues						
	Mode					
1		90°C	180'	--	10%	













L46 Bignè						
	Mode					
1		160°C	5'	--	10%	
2		175°C	15'	--	10%	









L47 Creme caramelle, Bounet						
	Mode					
1		100°C	5'	--	--	
2		85°C	40'	--	--	











L48 Fresh bread						
	Mode					
1		150°C	4'	--	40%	
2		170°C	10'	--	30%	
3		180°C	5'	--	10%	









L49 Genoese focaccia						
	Mode					
1		150°C	5'	--	---	
2		160°C	20'	--	--	

L50 Frozen bread						
	Mode					
1		165°C	5'	--	50%	
2		165°C	7'	--	20%	
3		180°C	8'	--	--	

L51 Fresh pieces of pizza						
	Mode					
1		170°C	4'	--	30%	
2		170°C	8'	--	30%	
3		180°C	10'	--	10%	

L52 Fresh round pizza						
	Mode					
1		285°C	4'	--	10%	

L53 Re-heating on plate						
	Mode					
1		115°C	3'	--	50%	
2		115°C	4'	--	30%	

L54 Re-heating on tray						
	Mode					
1		140°C	15'	--	40%	

Note: Always pre-heat the oven!

26 • PRE-STORED RECIPES

TIMED RECIPES - VACUUM COOKING

L55 Fruit pieces						
	Mode					
1		85°C	18'	--		

L59 Fresh vegetables						
	Mode					
1		85°C	14'	--		

L56 Pieces of pear						
	Mode					
1		95°C	18'	--		

L60 Pieces of potato						
	Mode					
1		100°C	18'	--		

L57 Custard						
	Mode					
1		85°C	5'	--		
2		85°C	5'	--		
3		85°C	5'	--		

L61 Stewed and nighttime cooking						
	Mode					
1		85°C	540'	--		

L58 Fresh green vegetables						
	Mode					
1		95°C	10'	--		











L62 Low pasteurisation						
	Mode					
1		65°C	45'	--		













L63 High pasteurisation						
	Mode					
1		85°C	45'	--		













Note: Always pre-heat the oven!











26 • PRE-STORED RECIPES














RECIPES WITH CORE PROBE














L64 Lasagne/Aubergine Parmigiana						
	Mode					
1		150°C	--	70°C	50%	
2		170°C	--	95°C	10%	














L65 Traditional roasts						
	Mode					
1		190°C	10'	--	10%	
2		150°C	--	50°C	20%	
3		160°C	--	70°C	40%	











L66 Slow cook traditional roasts						
	Mode					
1		180°C	15'	--	10%	
2		110°C	--	60°C	50%	
3		150°C	--	70°C	40%	









L67 Roast-beef and whole fillets						
	Mode					
1		230°C	8'	--	10%	
2		100°C	--	53°C	30%	









L68 Roast meats with rind						
	Mode					
1		100°C	10'	-		
2		130°C	--	68°C	20%	
3		190°C	15'	--	10%	

L69 Slow cooking roast meats with rind						
	Mode					
1		100°C	10'	-		
2		90°C	--	68°C	20%	
3		190°C	15'	--	10%	

L70 Leg of Lamb						
	Mode					
1		100°C	5'	-		
2		120°C	--	65°C	20%	
3		170°C	15'	--	30%	

L71 Braised meat and pot roasts						
	Mode					
1		130°C	--	90°C	80%	
2		100°C	30'	--	50%	










L72 Grilled ribs/fillet						
	Mode					
1		250°C	--	50°C	10%	










L73 Grilled pork/veal fillet						
	Mode					
1		250°C	--	55°C	10%	









Note: Always pre-heat the oven!











26 • PRE-STORED RECIPES










RECIPES WITH CORE PROBE









L74 Steamed lobster						
	Mode					
1		95°C	--	85°C		











L75 Steamed whole fish						
	Mode					
1		95°C	--	65°C		











L76 Medium sized fish						
	Mode					
1		180°C	--	65°C	30%	













L77 Large fish						
	Mode					
1		150°C	--	50°C	40%	
2		170°C	--	65°C	30%	











L78 Steamed potatoes						
	Mode					
1		100°C	--	94°C		











L79 Potatoes cooked in foil						
	Mode					
1		180°C	--	94°C	10%	

L80 Leg of turkey/goose						
	Mode					
1		145°C	--	75°C	80%	
2		200°C	--	85°C	10%	

L81 Roast duck, pheasant, guinea-fowl						
	Mode					
1		155°C	--	80°C	70%	
2		185°C	--	85°C	30%	

L82 Roast chicken						
	Mode					
1		165°C	--	65°C	30%	
2		185°C	--	82°C	10%	
3		220°C	--	87°C	10%	











L83 Speedy chicken						
	Mode					
1		220°C	--	70°C	90%	
2		240°C	--	87°C	20%	











L84 Roast chicken in pieces						
	Mode					
1		200°C	20'	--	60%	
2		220°C	--	87°C	20%	











Note: Always pre-heat the oven!









26 • PRE-STORED RECIPES

RECIPES WITH CORE PROBE










L85 Filled tarts/apple pie						
	 Mode					 *
1		160°C	--	55°C	40%	
2		165°C	--	98°C	10%	










L87 Re-heating on plate						
	 Mode					 *
1		115°C	3'	--	50%	
2		115°C	--	65°C	30%	










L86 Pan Brioches						
	 Mode					 *
1		150°C	5'	--	30%	
2		150°C	--	98°C	10%	










L88 Re-heating on tray						
	 Mode					 *
1		140°C	--	65°C	40%	

RECIPES WITH CORE PROBE - VACUUM COOKING

L89 Low temperature meat						
	 Mode					 *
1		58°C	--	52°C		

L91 Poultry and game						
	 Mode					 *
1		75°C	--	67°C		

L90 Traditional roasts						
	 Mode					 *
1		75°C	--	64°C		

L92 Whole fish/bowls						
	 Mode					 *
1		72°C	--	65°C		

Note: Always pre-heat the oven!

NOTES


This image shows a full page of blank, lined paper. It features approximately 28 evenly spaced horizontal grey lines across its entire width, providing a template for writing or drawing. The margins are consistent on all sides.

NOTES



[illegible]

DESCRIPTION OF DISPLAY AND KEYS

VERSION S

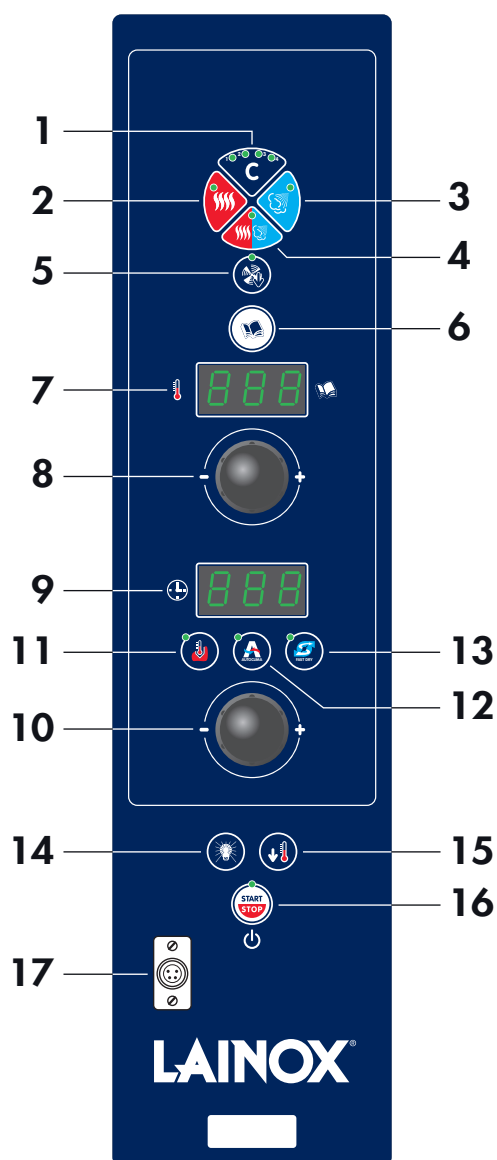

VERSION S COMPACT

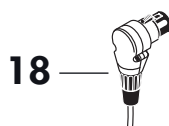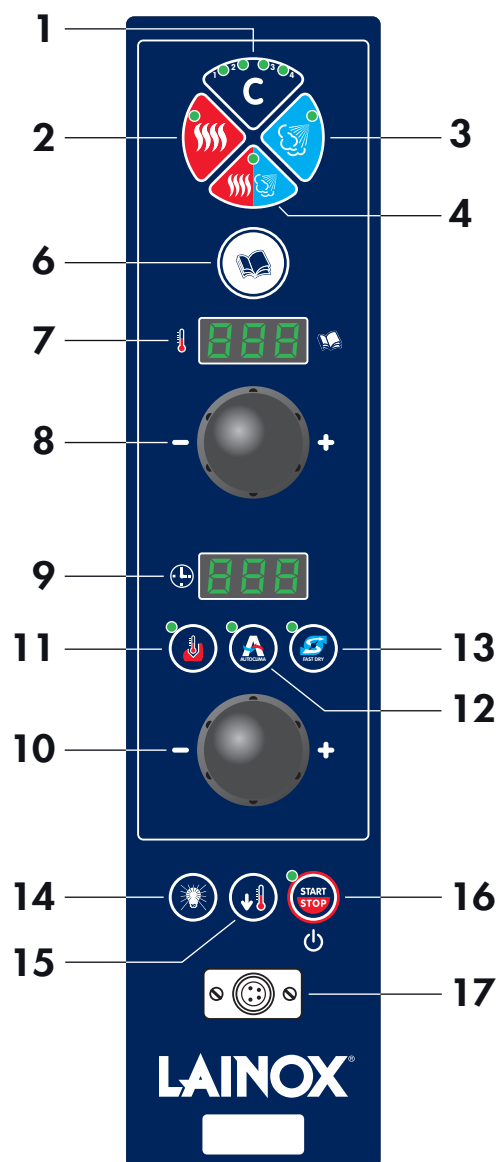

- 1 - Cooking cycle button
- 2 - Convection mode button
- 3 - Steam mode button
- 4 - Convection/steam combi mode button
- 5 - Reduced speed button
- 6 - Cooking/recipes programs button
- 7 - Display showing cooking chamber temperature and the program/recipe
- 8 - Temperature setting/selection knob
- 9 - Display with cooking time (remaining/set), product core temperature display (real/set), humidity display

- 10 - Knob for setting/selecting Time/Core Temperature
- 11 - Button for cooking with core temperature probe
- 12 - Button for automatic humidity (AUTOCLIMA), Manual humidifier button
- 13 - Button for cavity vent
- 14 - Oven lights key
- 15 - Button for fast cooling with door open
- 16 - Main switch - Start/Stop button
- 17 - Core temperature probe connection
- 18 - Core temperature probe

